
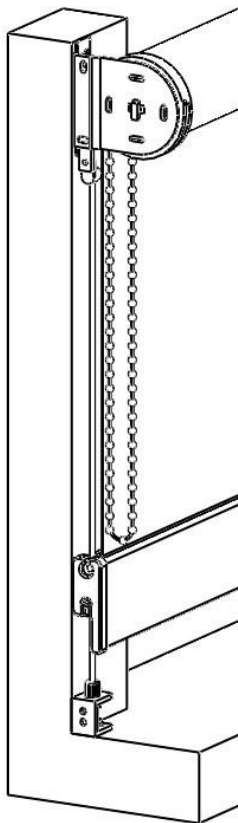



EXTERIOR GUIDE CABLE INSTALLATION INSTRUCTIONS CLUTCH OPERATED SHADE

Cable guide should be installed between the window and motor and idler bracket for regular roll and in front of the bracket for reverse roll shade installation.


1. Attach the clutch and idler brackets to the wall or ceiling. Attach tensioning cable to the buckle on the bracket. Make sure the cable is on the inside of the bracket between the wall and the shade fabric as shown on Pic. 1.

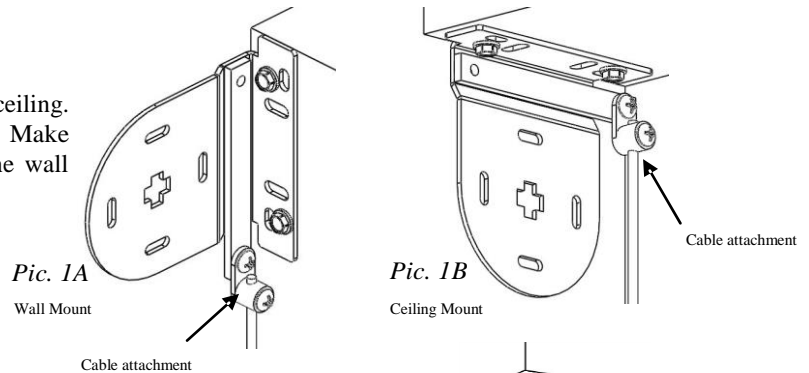

2. With the shade lowered all the way down, stretch the cable vertically to find the best position for the hold down bracket. Attached the U hold down bracket to the wall or a floor. Make sure the U brackets is vertically below the upper brackets and there are no obstacles between them.

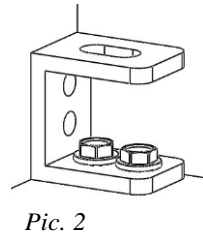


3. With the tensioning cable stretched, secure it in place with the set screw as shown in Pic. 3. Slide the bolt through the upper opening in the U bracket and tighten it with the tensioning nut.

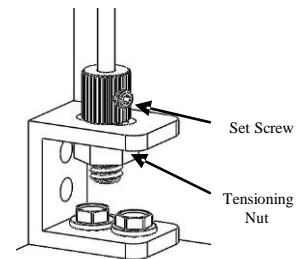

4. Repeat steps 1 to 4 for the opposite side of the shade.

5. Lower and raise the shade making sure the cables are not binding and hem bar is sliding smoothly. Pic. 4

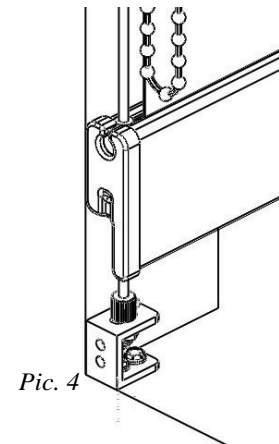

Hembar available in White Only.

Max Size 66" x 66"

Note: Fascia is required with this system for an additional cost.